


User Manual

M106K

Professional Graphics Tablet



- 
- Thank you for choosing and purchasing M106K, which is a professional graphics tablet.
 - To give you a better understanding and using of this product, please read this user manual carefully before using.
 - Compatibility: Microsoft Windows 7/8/10, Mac OS X 10.10 or later.
 - This product is compliant with the standards prescribed by the state.
 - This user manual only display the windows information, it will also apply to MAC OS unless otherwise specified.

Contents

1. Introduction and Installing	4
1.1 Packing List	4
1.2 Product Overview	4
1.2.1 Front View	4
1.2.2 Rear View.....	4
1.2.3 Stylus Pen(ArtPaint AP20)	5
1.2.3.1 Replace the pen nib	5
1.2.3.2 Charging the pen.....	5
1.3 Tablet and Driver Installing	6
1.3.1 OS Compatibility.....	6
1.3.2 Driver Installing	6
1.3.3 Install the tablet	6
2. Setup and Operation Guide	6
2.1 Working Area Setting	6
2.1.1 Using Multiple Monitors	6
2.1.2 Working Area Setting	7
2.1.3 Rotate Working Area	7
2.2 Press Keys Function Setting	8
2.3 Pen Button Setting	8
2.4 Pressure Sensitivity Setting	9
2.5 Pen Pressure Testing	9
2.6 Enable the Windows Ink feature	10
2.7 Data Export and Import	10
3. Troubleshooting	11
4. Product Specification	11

1. Introduction and Installing

1.1 Packing List

 
Make sure that all of the following contents are included after unpacking:

- Graphics Tablet x 1
- Stylus Pen (ArtPaint AP20) x 1
- Pen Nibs x 4
- Pen Nib Clip x 1
- Mini USB Cable x 1
- Pen Charging Cable x 1
- Quick Start Guide x 1


Please contact the agency where you purchased the product if there is a defect or missing part.

1.2 Product Overview


1.2.1 Front View

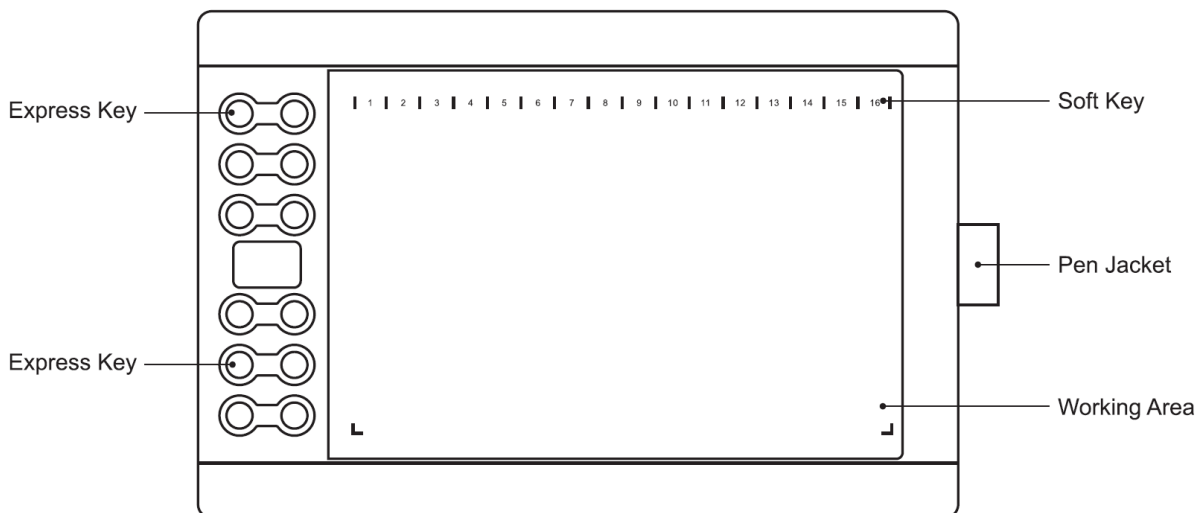

 1.2.2 Rear View

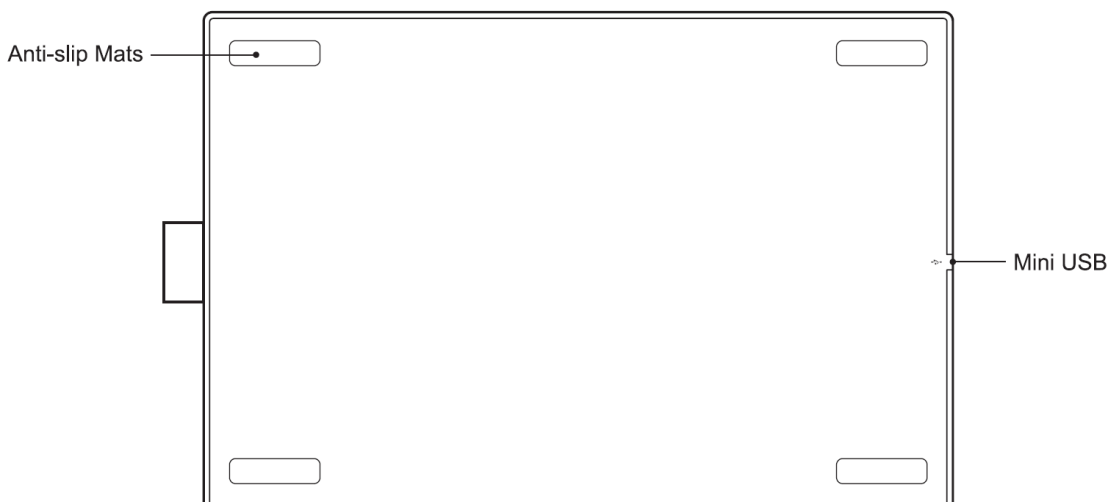

1.2.3 Stylus Pen(ArtPaint AP20)

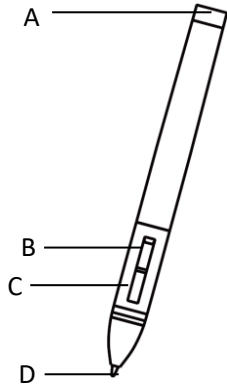


- A: Charging Port
- B: Upper Button: Mouse Right Key function(By default)
- C: Lower Button: Switch Brush(By default)
- D: Pen Nib: Mouse Left Key function

1.2.3.1 Replace the pen nib


When the nib gets too short or develops a sharp edge, you can replace it with one of the spare nibs that comes with the pen.

- 1) Use the pen nib clip to pull the old nib straight out of the pen.
- 2) Insert a new pen nib into the stylus pen and push the nib until it stops.

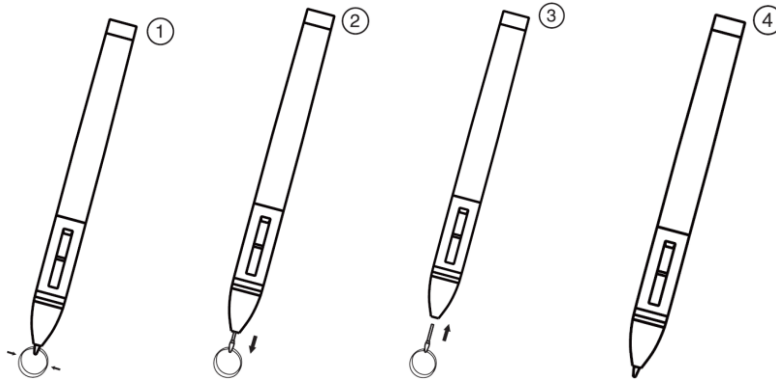

1.2.3.2 Charging the pen

Please charge the pen with the rechargeable cable when power of the pen runs out. It can be connected to computer, power supply or power bank to charge.

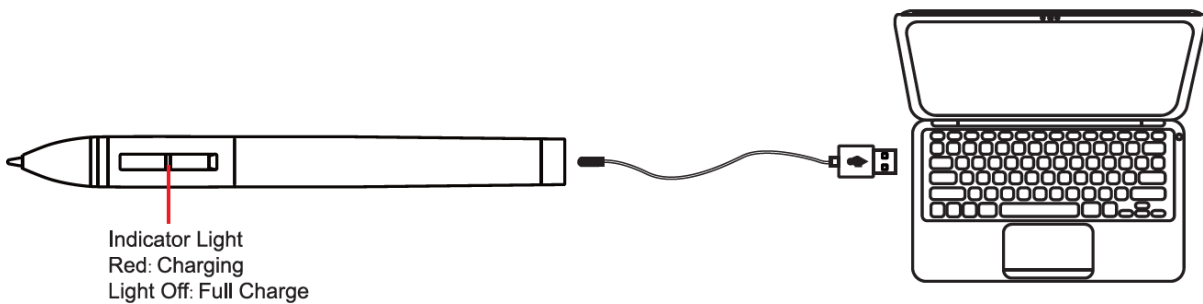

1.3 Tablet and Driver Installing

1.3.1 OS Compatibility


Before installing the Tablet, make sure your PC Operation System (OS) is Windows 7 / 8 / 10 and MAC 10.10 or later

1.3.2 Driver Installing

- 1) please download the driver from our website: www.gaomon.net.
- 2) Please close all graphics software and anti-virus program before installing the driver.
- 3) Please uninstall other tablet driver if you have installed them.
- 4) Then double click the driver program and follow the instruction to finish the installation.

1.3.3 Install the tablet

- 1) Connect the tablet to your computer with the mini USB cable.
- 2) Now you can use the pen to operate the tablet.

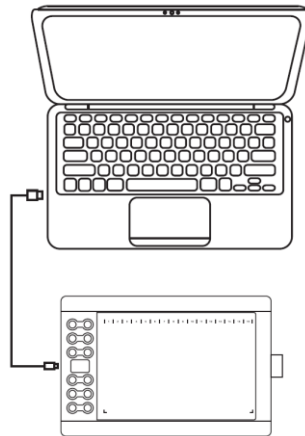

2. Setup and Operation Guide


2.1 Working Area Setting

2.1.1 Using Multiple Monitors

Select the Work Area tab to define the relationship between pen movement on the tablet and cursor movement on the monitor screen.

By default the entire active area of tablet maps to the entire monitor. If more than one monitor is in use and you are in extended mode, you need to choose the related monitor on the driver interface which you are going to map to.


If your monitors are in mirror mode (All monitors display the same content), the tablet maps to the entire space on each monitor and the screen cursor is displayed on each monitor simultaneously.

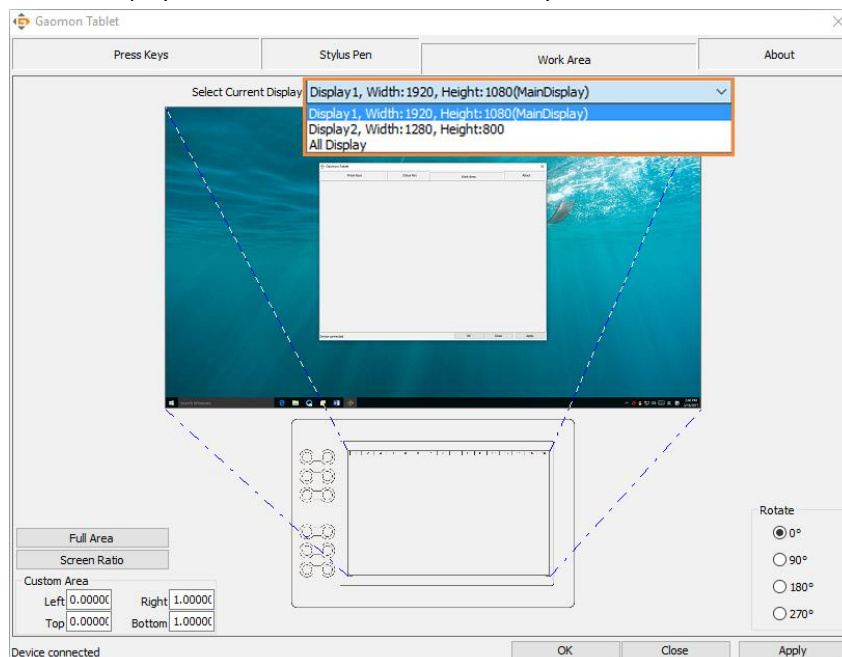

2.1.2 Working Area Setting


Define the tablet area that will be mapped to the screen area.

1. Full Area: the entire active area of the tablet. This is the default setting.
2. Customized Area: <1> .Enter coordinate values. Or<2>. Drag the corners of the foreground graphic to select the screen area.

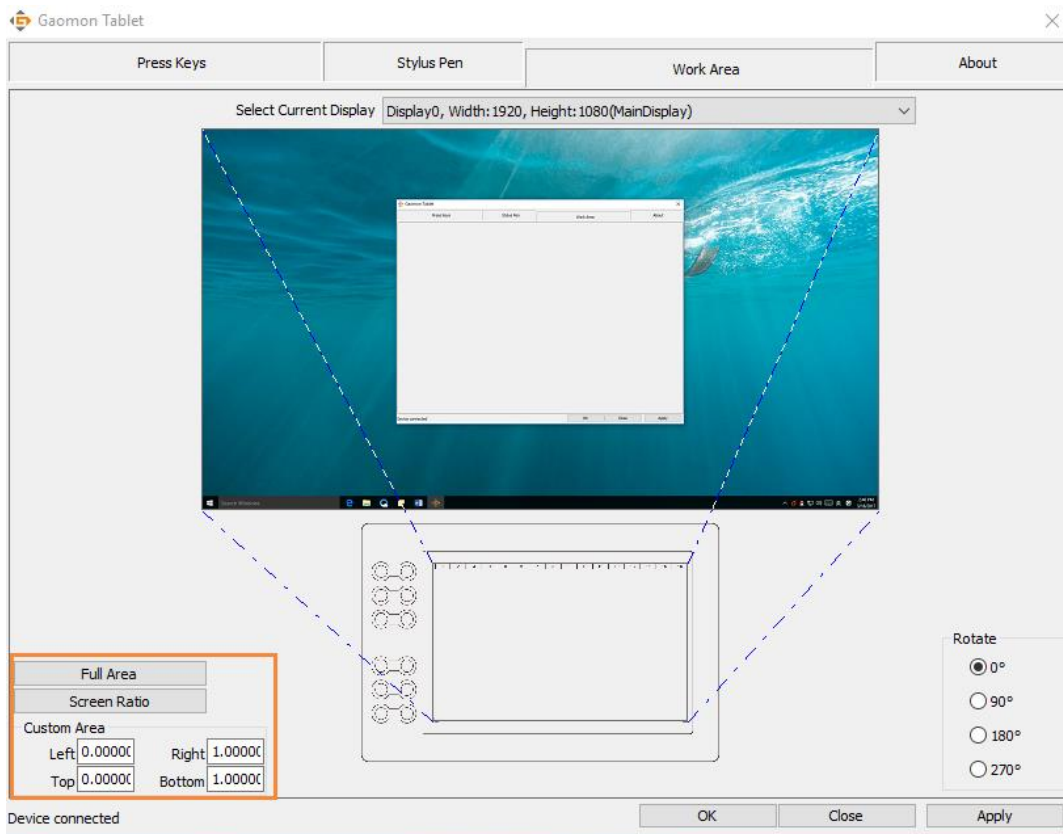

2.1.3 Rotate Working Area

 By changing the direction of the tablet to adapt to the left and right hand operation. We provide four kinds of choice.

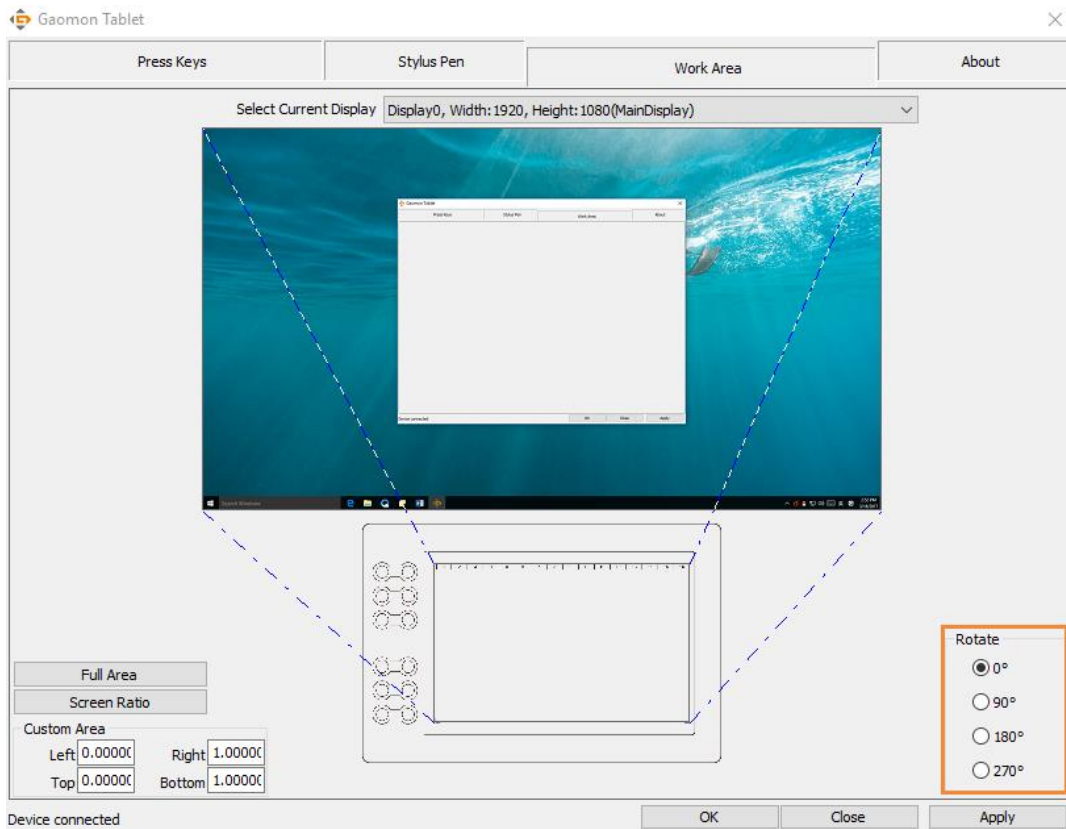


2.2 Press Keys Function Setting

Default Setting : Place the cursor on the button or click the button icon to see the default values for the press keys

Customized : Select the function to be achieved on the pop-up dialog box, then click APPLY or OK to take effect.


Enable/Disable Press Keys: Check/Uncheck“Enable Press Keys”

Enable/Disable Soft Keys: Check/Uncheck“Enable Soft Keys”

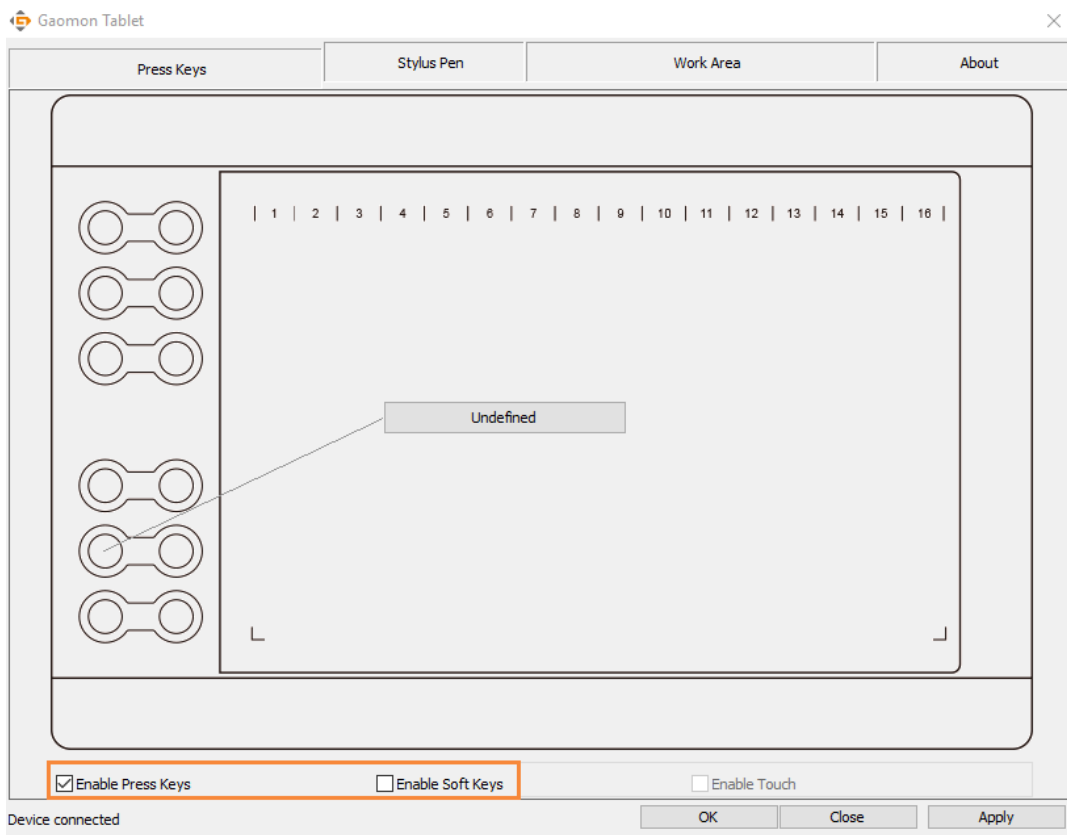


2.3 Pen Button Setting

Select the function to be achieved on the pop-up dialog box, then click APPLY or OK to take effect.

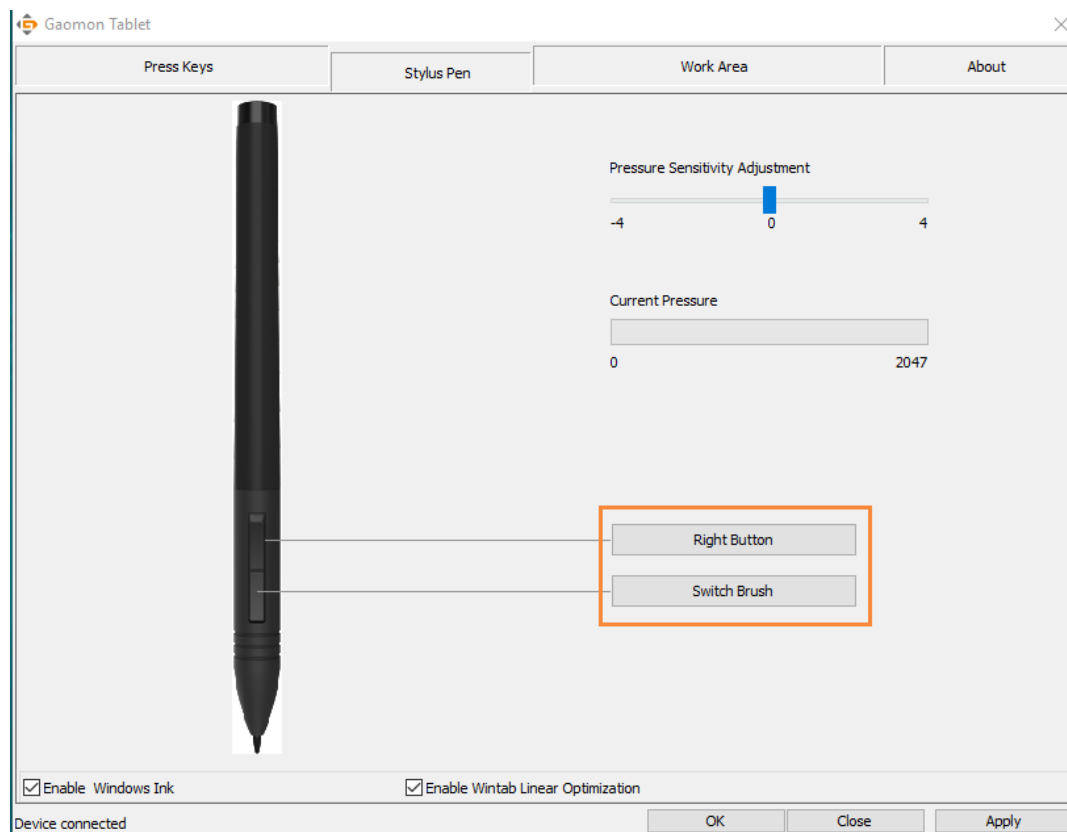


2.4 Pressure Sensitivity Setting

 The pressure sensitivity will be changed by dragging the slider up and down, the smaller the value, the more pressure sensitive.

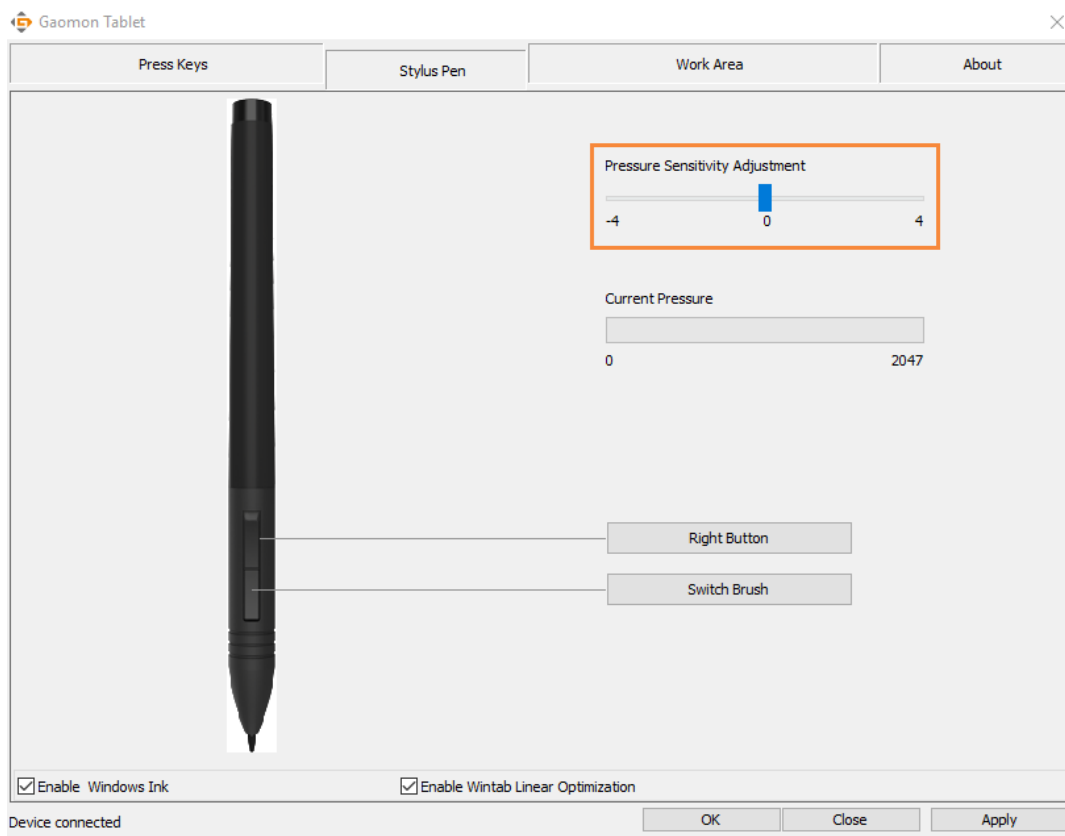


2.5 Pen Pressure Testing

You can apply pressure gradually to the stylus as well as watch the pressure level on the screen.

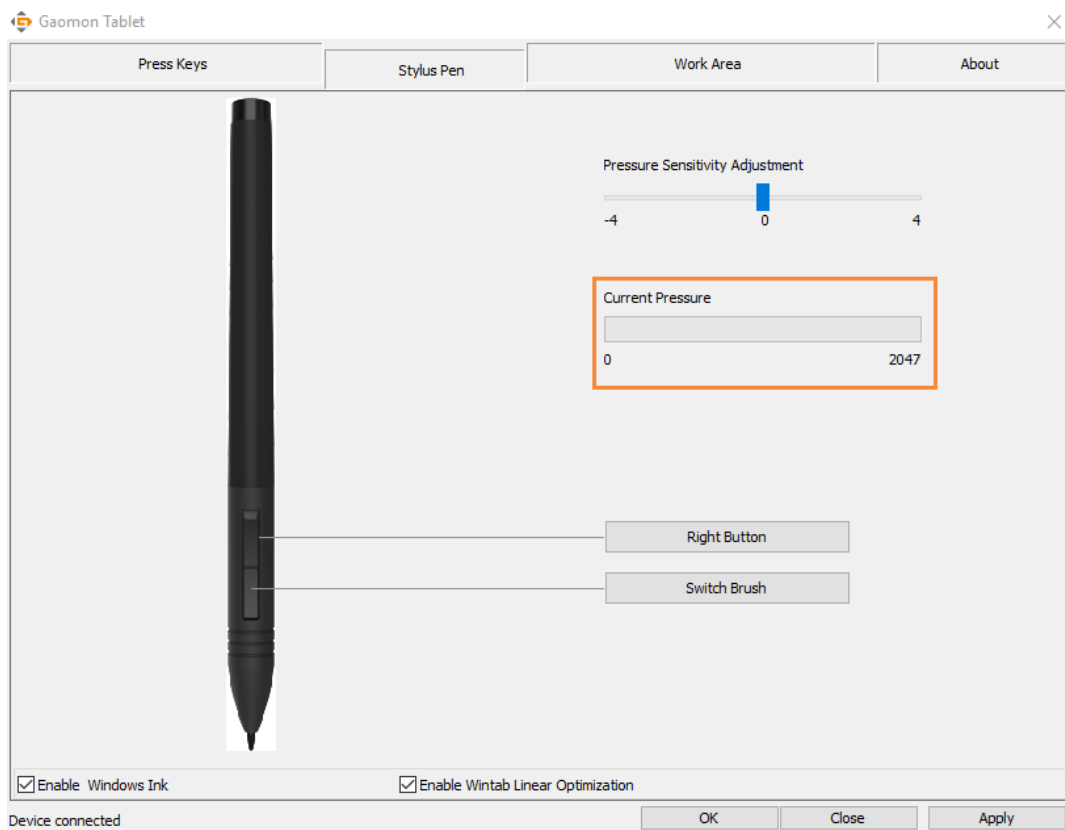


2.6 Enable the Windows Ink feature

 Microsoft Windows provides extensive support for pen input. Pen features are supported in such as Microsoft Office, Windows Journal, Adobe Photoshop CC 2014, SketchBook6 and so on.

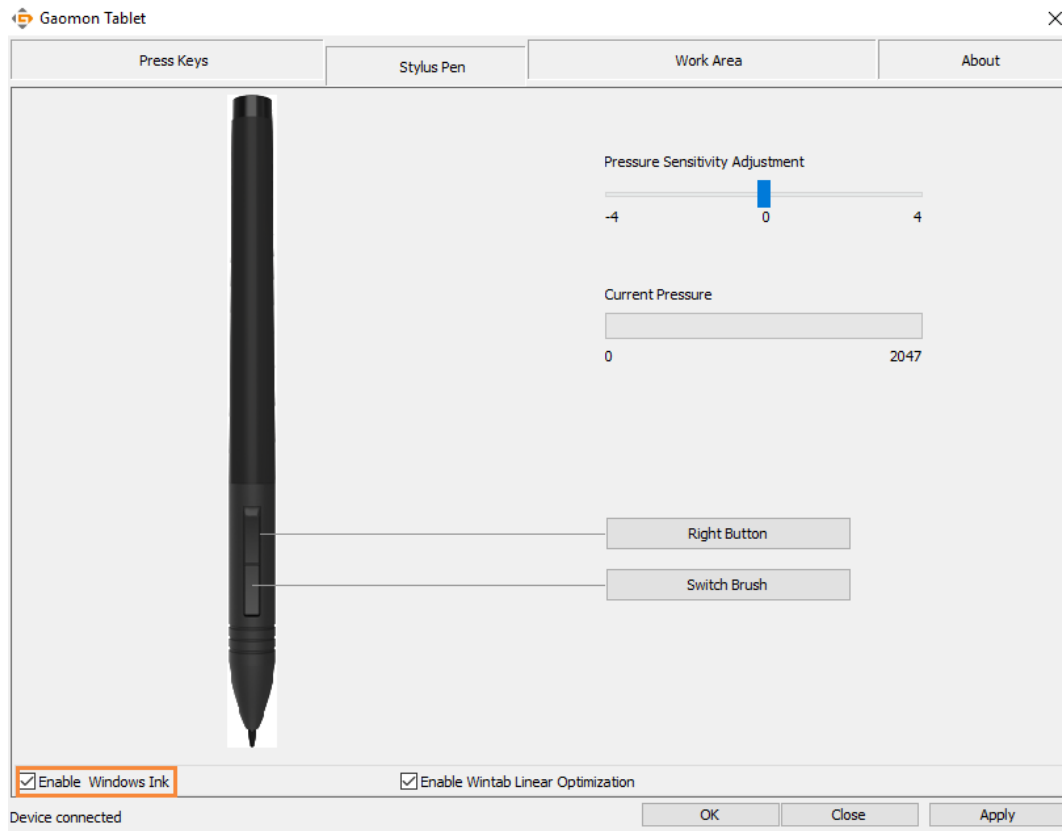

2.7 Data Export and Import

The driver supports exporting and importing your custom configuration data of the product, which is convenient for you to use different software and avoid the trouble of repeated settings.

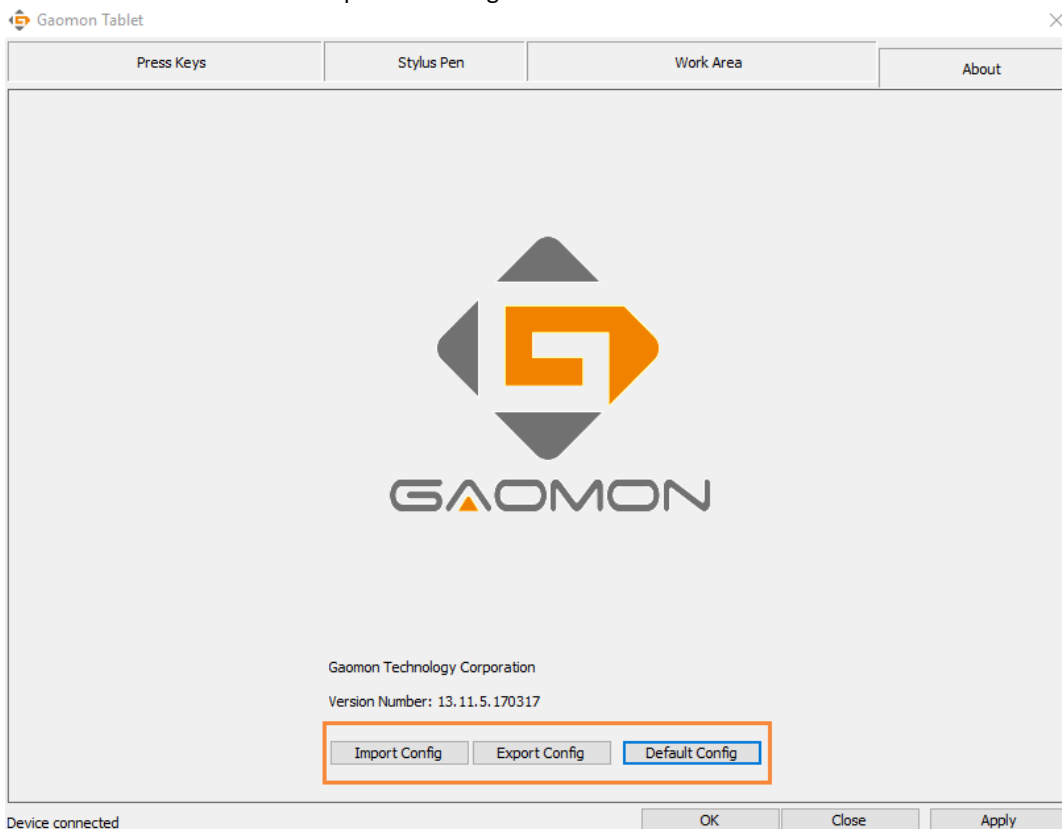

3. Troubleshooting

Please refer to the following tables if you encounter any problems.

Problems	Suggested action
The pen is no function	<ul style="list-style-type: none">* Make sure you have installed the driver correctly.* Make sure the driver is running.* Make sure the pen is full of power.* Try using mouse to double check, if mouse also no function, please restarting your computer or your application.* Try to reconnect the cable.* Try to reinstall the USB Tablet driver.
Pen nib is too short	<ul style="list-style-type: none">* Replace the pen nib if it is too short.
The cursor move Incorrectly	<ul style="list-style-type: none">* Eliminate interference from nearby electrical devices.* Try restarting your computer for double check.
The side switch does not work	<ul style="list-style-type: none">* Be sure that the pen nib is within 10mm of the tablet surface but not against the tablet surface when you press the side button.* Be sure that the side button is set to the proper function you are expecting to occur for the application.

4. Product Specification

Graphics Tablet	
Model	M106K
Pen Technology	Electromagnetic Resonance
Working Area	254 x 158.8mm (10X6.25")
Dimension	359.6 x 240 x 10.5mm
Color	Black
Net Weight	780g
Touch Resolution	5080LPI
Report Rate	233PPS
Pen Sensing Height	10mm
Interface	MINI USB
Express Keys	12 Customized Express Keys
Function Keys	16 Customized Function Keys
OS Support	Windows 7/8/8.1/10, MAC OS 10.10 or later
Stylus Pen	
Model	ArtPaint AP20 (Rechargeable)
Dimension	149 x 12.7mm
Weight	14g
Pressure	2048Levels
Battery Life	Approx. 350
Automatic Sleep	10min
Accuracy	±0.3mm